



Detail Issued For Guidance Only,
Designer's Approval Required

Site construction sequencing should be assessed before the appropriate Visqueen Standard Detail is selected & approved by the Designer

Step 1

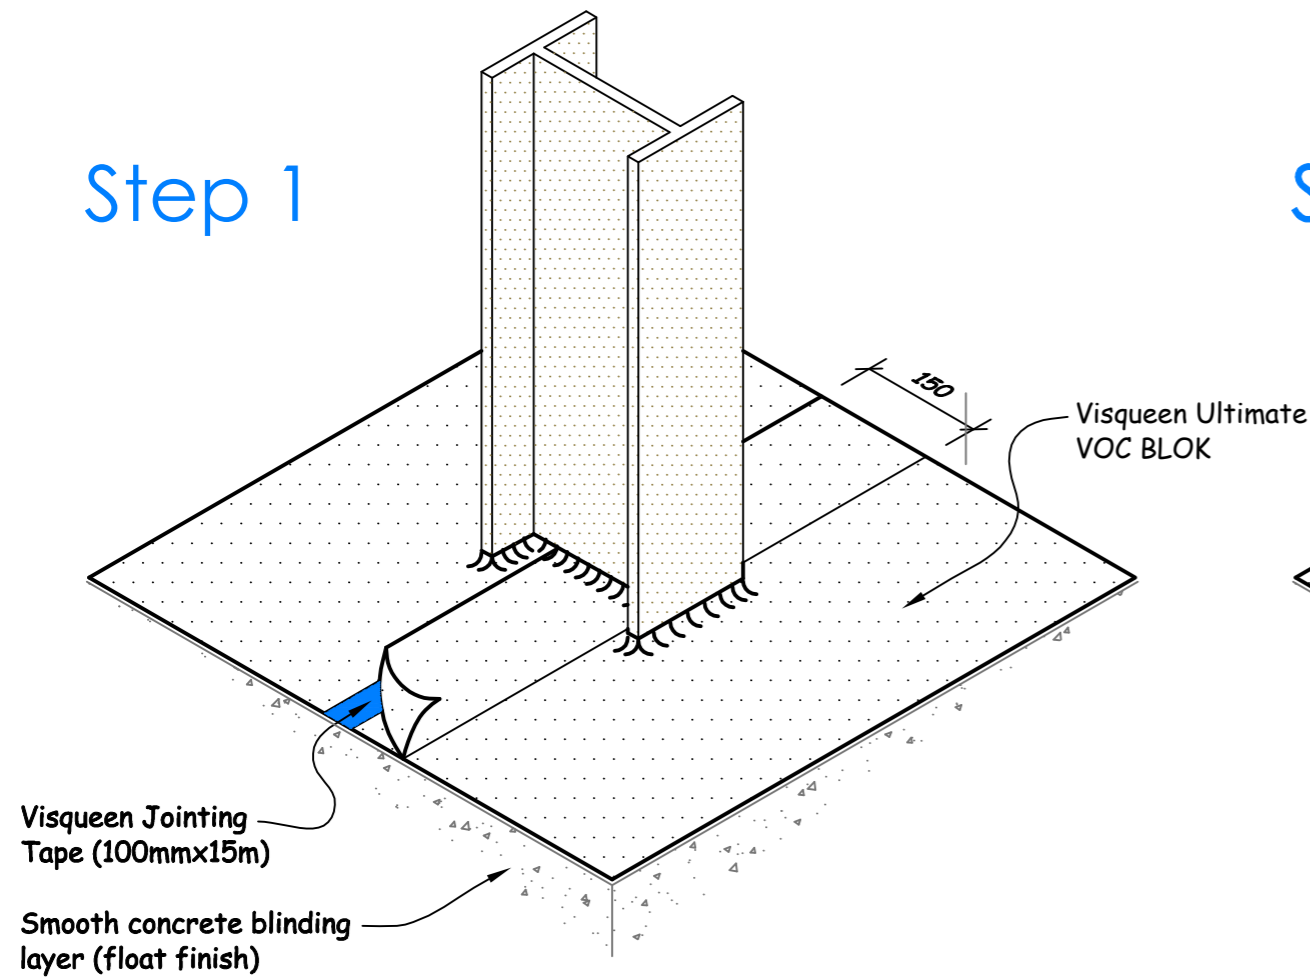


Step 2

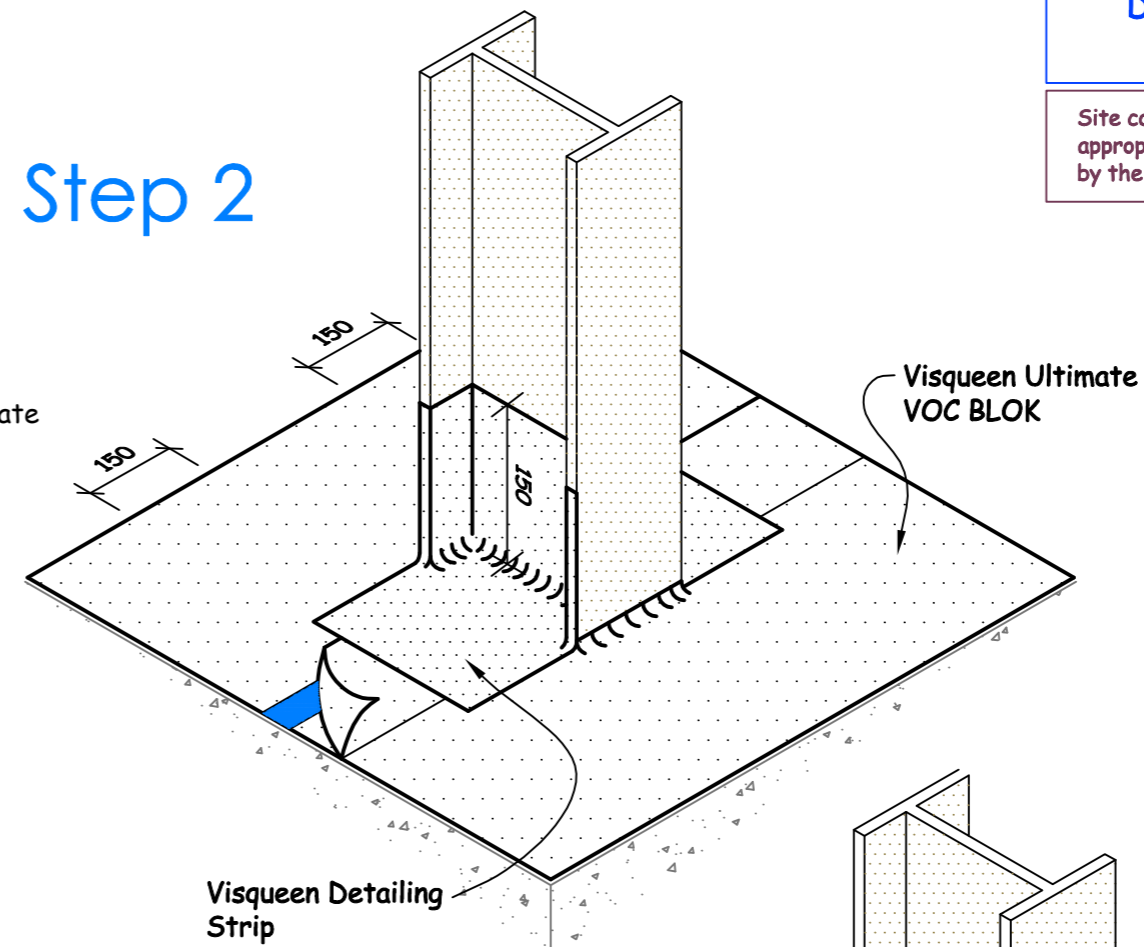

Prior to applying Visqueen Detailing Strip all surfaces must be primed using Visqueen HP Tanking Primer. The Detailing Strip should be cut and dressed neatly up the primed column as shown. Special detailing measures are required when ground movement is anticipated.

Step 3

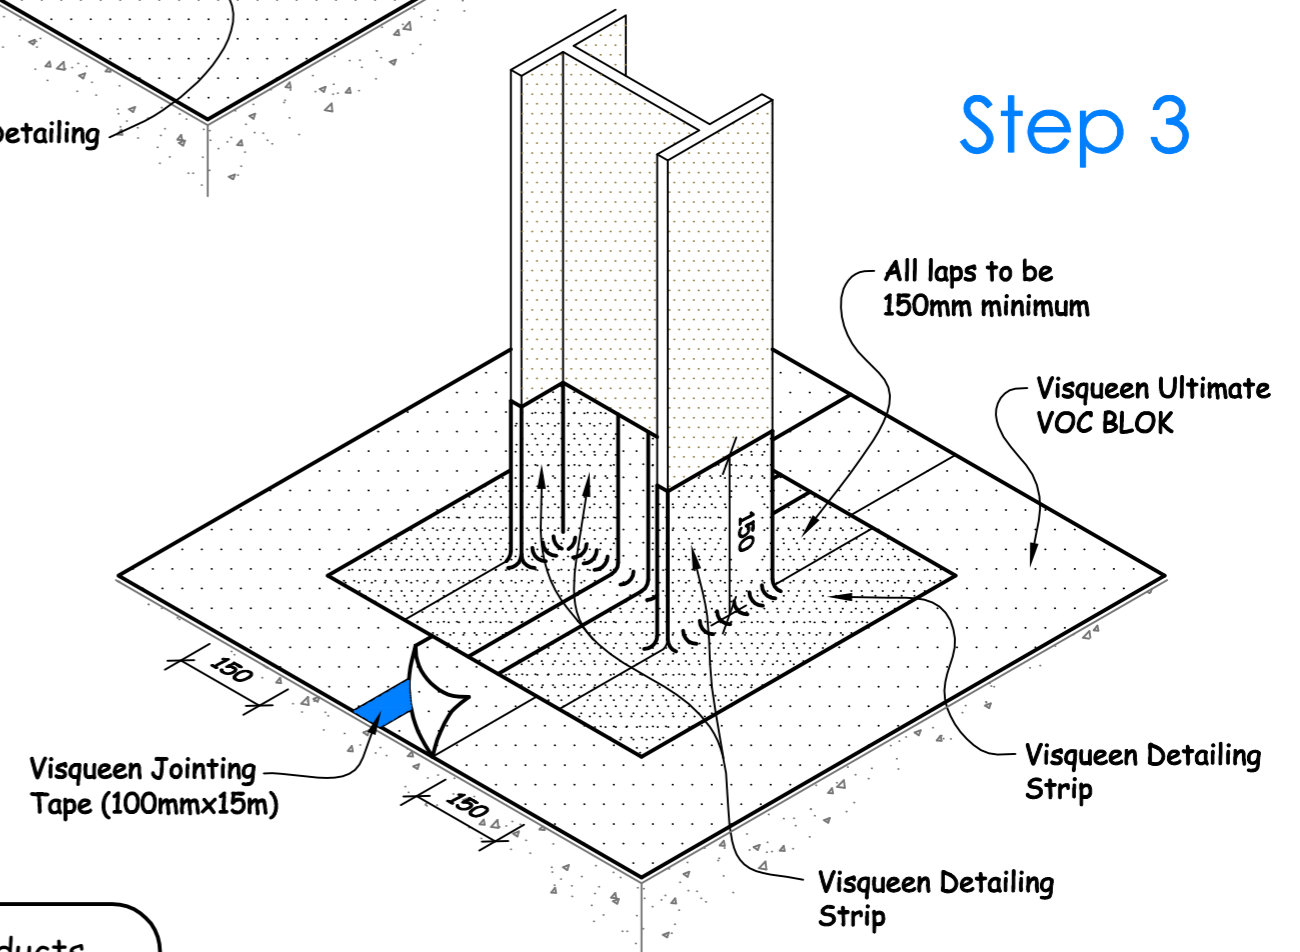

Typical Sealing Method to Universal Columns (Slab junctions only)

NB ; DO NOT SCALE - USE FIGURED DIMENSIONS ONLY.



Visqueen Building Products
Contact Technical Support :
t : 0333 202 6800
f : 0333 202 6886
e : enquiries@visqueenbuilding.co.uk
www.visqueenbuilding.co.uk

Project: Standard Detail : Visqueen Ultimate VOC BLOK					© COPYRIGHT RESERVED.
VOC-20	Concrete Slab	Ultimate VOC BLOK	-	VOC & Methane	

In order to develop a robust design for protecting the structure against contaminants and harmful ground gases, a risk assessment must be carried out in line with the guidance given in CIRIA C748 and BS 8485:2015